


382-406 Vertical Swing Seat

Page 1
Rev 10/12/2004

*** IMPORTANT ***

PLEASE RETAIN THIS INSTRUCTION SHEET IN YOUR FILES. IT CONTAINS IMPORTANT MAINTENANCE INSTRUCTIONS, AS WELL AS REPLACEMENT PARTS INFORMATION.

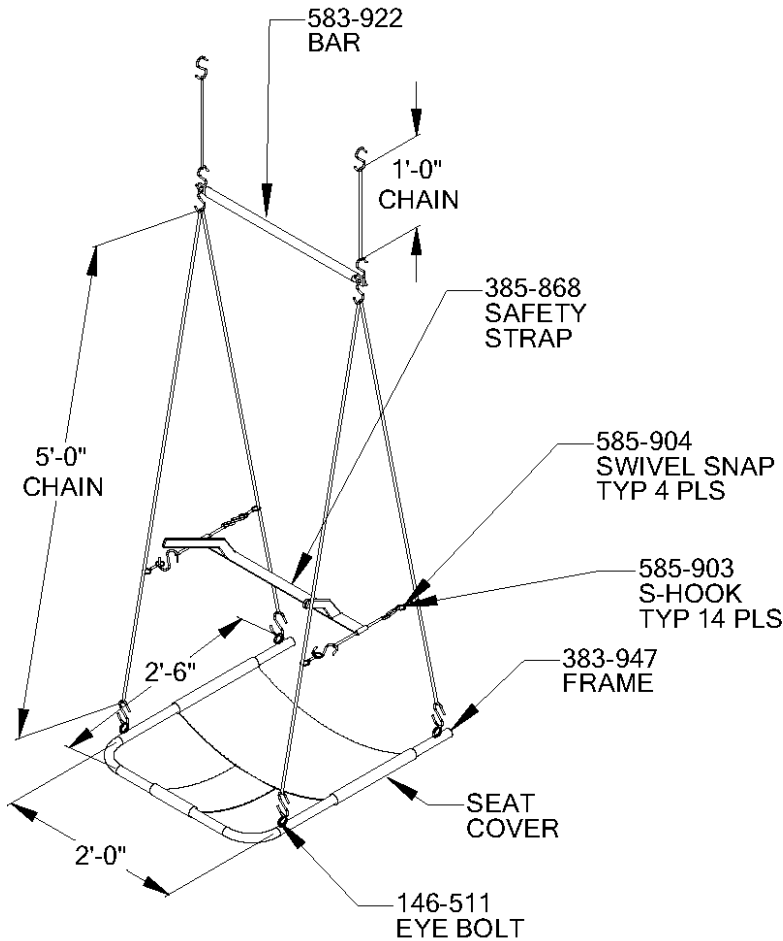

NOTE:

**CLOSE ALL
"S" HOOKS**

PACKING LIST

1 CTN	1 Hardware Bag
	1 383-506 Vertical Swing seat Assembled
	4 4/0 Double Loop Chain (5'-0" Lg.)
	1 583-922 Bar
	2 4/0 Double Loop Chain (1'0" long)
	2 4/0 Double Loop Chain (9" long)

HARDWARE BAG

14	585-901	3" "S" Hooks
2	105-015	1-5/8" Pipe Plugs
4	146-511	5/16" x 3-1/4" Eye Bolts
4	216-501	5/16" Hex Nuts
4	326-501	5/16" Lock Washers
4	585-903	#10 1 3/4" S Hook
4	585-904	1/2" Swivel Snap

- NOTE: If the Vertical Swing Seat is to be used in an open park or playground installation, we recommend some system of supervision whereby management removes the seat, or secures it to the nearest support, to prevent unsupervised misuse of the equipment.
- NOTE: When Vertical Swing Seat is hung from a top swing rail (8'-0" from the ground) SEAT surface should be 16" to 18" from the ground. Higher distances from the ground can be obtained, by inserting "S" Hooks into a different Chain Link.
- NOTE: 382-406 Vertical Swing seat ships assembled.