

602-227 6' PORTABLE PARK BENCH WITH ARMS

IMPORTANT

Please retain this instruction sheet in your files. It contains important replacement parts information.

PACKING LIST

1	CTN	1	Hardware Bag
1	BDL	2	603-941 Bench Leg
1	BDL	2	603-906 6' Aluminum Board

HARDWARE BAG

1	105-017	2 3/8" Aluminum Pipe Plug
12	605-506	Board Clips
8	116-412	1/4" x 3" Hex Bolt
8	236-401	1/4" T Nut
8	316-402	1/4" Flat Washer
4	126-707	3/8" x 1 1/2" Button Hd Bolt
4	316-601	3/8" Flat Washer
4	226-602	3/8" Nylon Insert Lock Nut
4	126-505	5/16" x 1 1/4" Carriage Bolt
4	226-501	5/16" Lock Nut
4	316-501	5/16" Flat Washer
4	355-905	Luster Tube Black Plug
2	603-226	Plastic Arm Cap
2	603-227	Arm Rest Bracket

1 CTN	2 BDL	4 TOT. PCS.	58# TOT WT.	CLASS 70
-------	-------	-------------	-------------	----------

602-227 6' PORTABLE PARK BENCH WITH ARMS

Page 2
Rev 09/11/03

GENERAL ASSEMBLY INSTRUCTIONS:

Check all the parts and hardware with the packing list to be sure you have received everything needed to assemble this product. CONTACT YOUR LOCAL DISTRIBUTOR WITH NOTIFICATION OF ANY MISSING OR DAMAGED PARTS. Contact must be made within ten days of receipt of your order.

Only hand-tighten nuts & bolts on initial assembly. Final tightening should be done **EVENLY** after final assembly when unit has been plumbed & leveled.

After assembly is complete, **ANY ENDS OF BOLTS PROTRUDING BEYOND NUTS SHOULD BE CUT OFF AND/OR PEENED OVER TO REMOVE ANY SHARP PROJECTIONS.** Go over entire unit to file smooth any sharp edges or projections that may have been caused by rough handling in shipping or installation. T-Clamps are designed for both one and two bolt connections. In many situations only one bolt is required. See specific assembly instructions.

On products with platforms install 1-2 degrees off level to facilitate water drainage.

GENERAL MAINTENANCE INSTRUCTIONS:

Check **MONTHLY** for loose bolts, damaged or broken parts. Tighten and/or replace immediately.

SPECIFIC ASSEMBLY INSTRUCTIONS

1. Assemble bench as shown.