

501-121B&BP Super Dome With Brackets


IMPORTANT

Please retain this information sheet in your files. It contains important replacement parts information. All equipment should be installed in accordance with these instructions.

It is important to use and maintain all public playground equipment properly. Playground equipment, which is improperly maintained, can cause serious injury. Periodical inspections, maintenance, repair and/or replacement of damaged parts is necessary for safe operation of all playground equipment and safety of users. Resilient surfacing should be used under all playground equipment. Appropriate publications available at NO CHARGE from the Consumer Product Safety Commission include a "Handbook for Public Playground Safety". You can receive your free copy by calling 1-301-504-0850.

Ground Space is a 17'
Diameter Circle

Use Area is a 31'
Diameter Circle

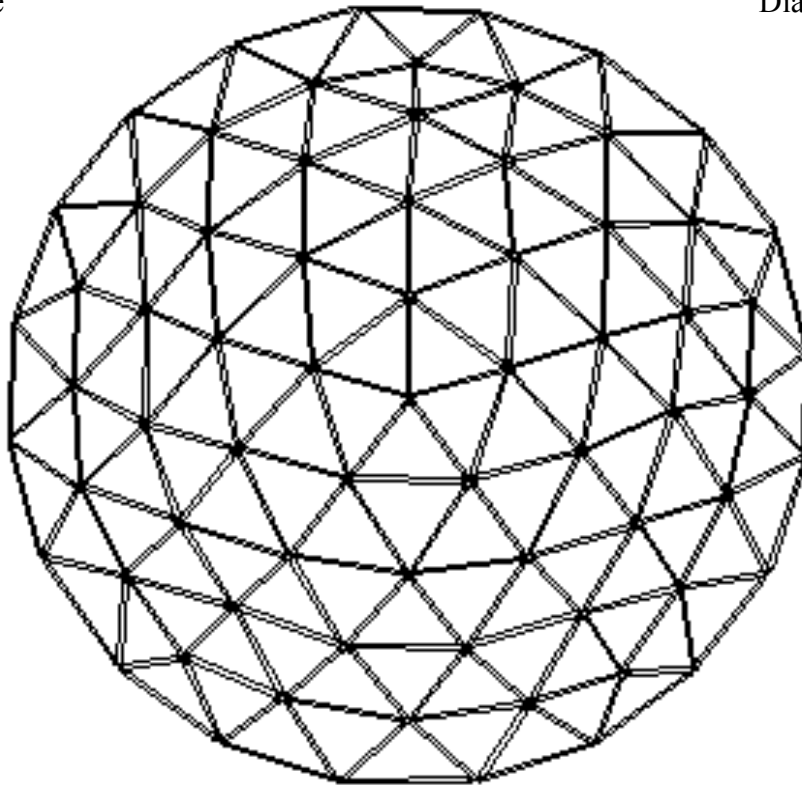

PACKING LIST

1	CTN	- 1	Hardware	Bag
1	CTN	- 20	913-370	Bottom Attach Brackets
		- 45	913-372	6-Hole Attach Brackets
		- 6	913-371	5-Hole Attach Brackets
1	CTN	- 20	503-647	Dome Anchors
2	CTN	- 15	503-220	Green Braces (2'-4")
4	CTN	- 20	503-221	Black Braces (2'-8.5")
1	CTN	- 20	503-222	Orange Braces (2'-9")
2	CTN	- 20	503-223	Brown Braces (2'-10.5")
1	CTN	- 20	503-224	Yellow Braces (2'-11.75")

HARDWARE BAG

380	-	116-538	5/16" x 1-3/4" BTN HD Bolts
20	-	116-535	5/16" x 1-1/2" BTN HD Bolts
800	-	316-501	5/16" Flat Washers
400	-	226-502	5/16" Nylon Lock Nuts
2	-	416-350	3/16" Socket Key
400	-	905-847	Bolt Cap
1	-	803-532	Warning Label
1	-	803-524	SportsPlay Label
1	-		Maintenance Checklist

13 CTN	13 TOTAL PIECES	400# TOTAL WEIGHT	CLASS 70
--------	-----------------	-------------------	----------

501-121B&BP Super Dome With Brackets


Page 2
Rev 7/28/2008

GENERAL ASSEMBLY INSTRUCTIONS:


1. Check each piece CAREFULLY and REMOVE any sharp projections that may have been caused by shipping.
2. Braces go on bottom side of brackets.
3. Two piece Bolt Caps are provided for use if desired. The holder must be put on before putting washer and nut on bolt. The cap goes on after the nuts is all the way tightened.

SPECIFIC ASSEMBLY INSTRUCTIONS:

1. Bolt bottom row together using 5/16" x 1 3/4" Button Head Bolts with one washer under bolt head and one washer with one lock nut. This is where the bottom brackets are attached. Follow color scheme on page 1 sketch.
2. When circle is complete, mark footing holes at each joint, move circle aside and dig holes.
3. Move back over holes and bolt dome anchors in place using a 5/16" x 1 1/2" Button Head Bolt with washer on both sides of the dome anchor and a lock nut. Holes must be drilled in the middle of the bottom bracket for anchors.
4. Continue adding rows, working around climber using hardware as in step #1. The brackets are set to where the five hole brackets set in the 5 brace joints and the 6 hole brackets set in the 6 brace joints. BE SURE to assemble all joints tightly until entire climber is completed.
5. When climber is completely assembled, tighten all bolts securely. Tighten securely by placing a "C"-Clamp (or similar) over the joined brace brackets and tightening down before cinching hardware. Allow for proper depth of resilient surfacing.
6. Pour footings up to 3" from top and allow at least 48 hours to harden.
7. Cover tops of footings with dirt.
8. Attach warning label and Manufacturer's Identification Label to a clean surface. The labels should be attached in a location where they are clearly visible and legible and away from normal hand and foot placement areas. The labels must be replaced if they become illegible, destroyed or removed. Contact your distributor for replacement labels.

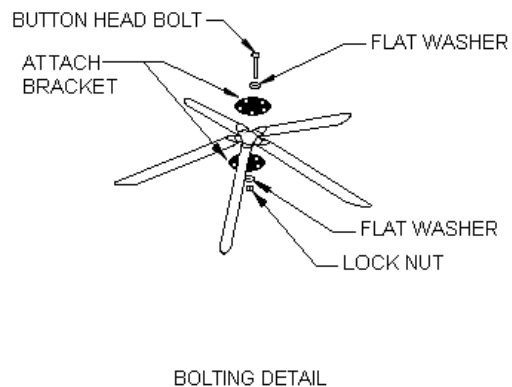


PERMANENT INSTALLATION

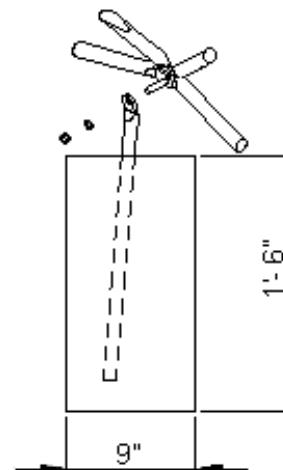

501-121B&BP Super Dome With Brackets


Page 3
Rev 7/28/2008

Footing Diagram

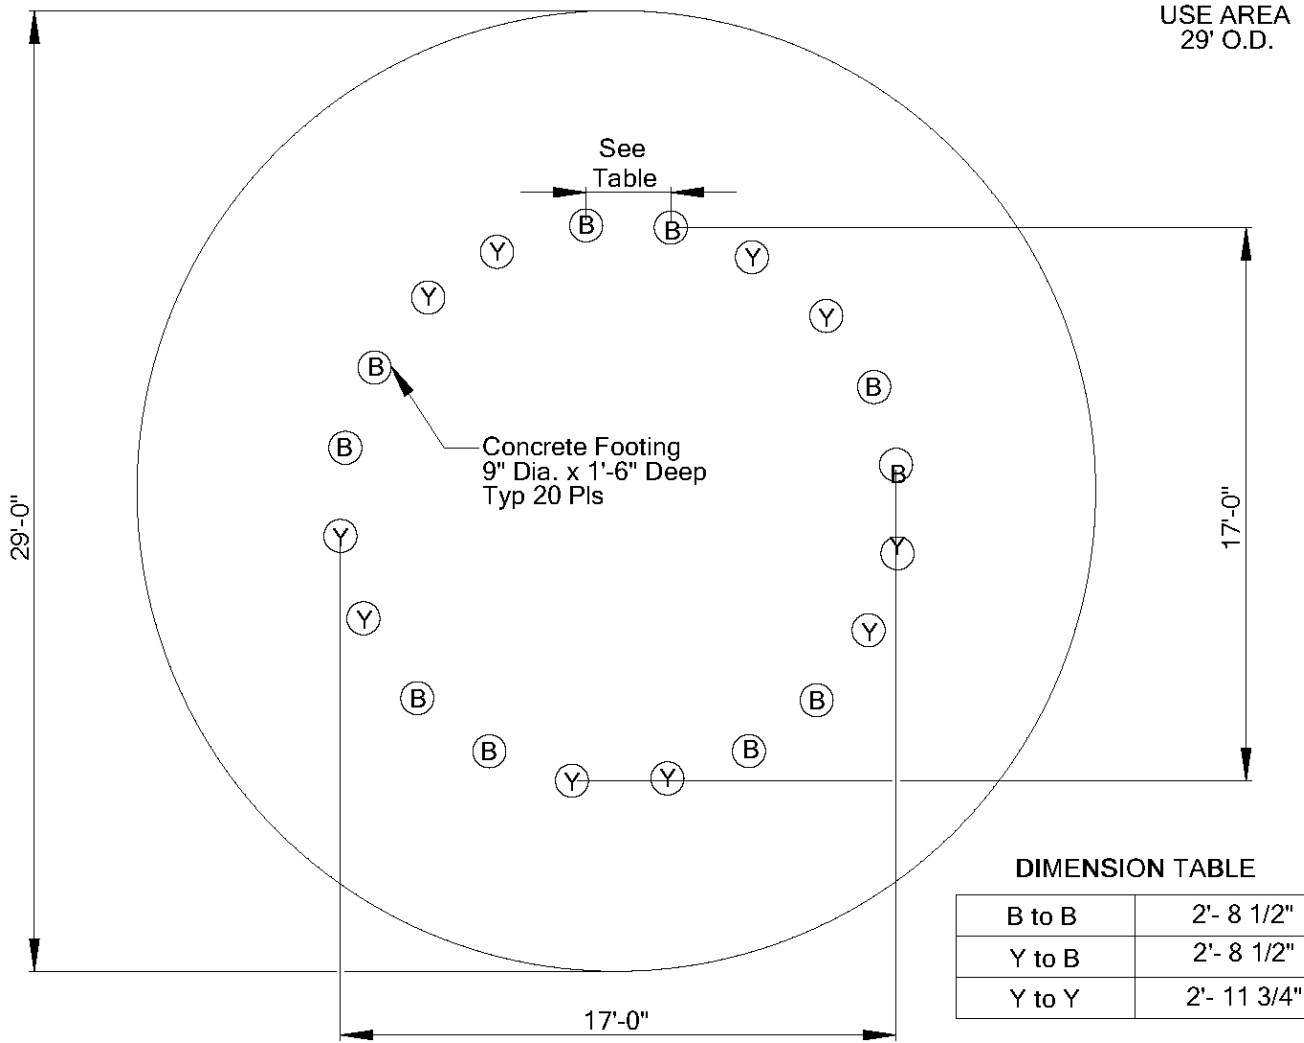

501-121B&BP Super Dome With Brackets

Installation Key

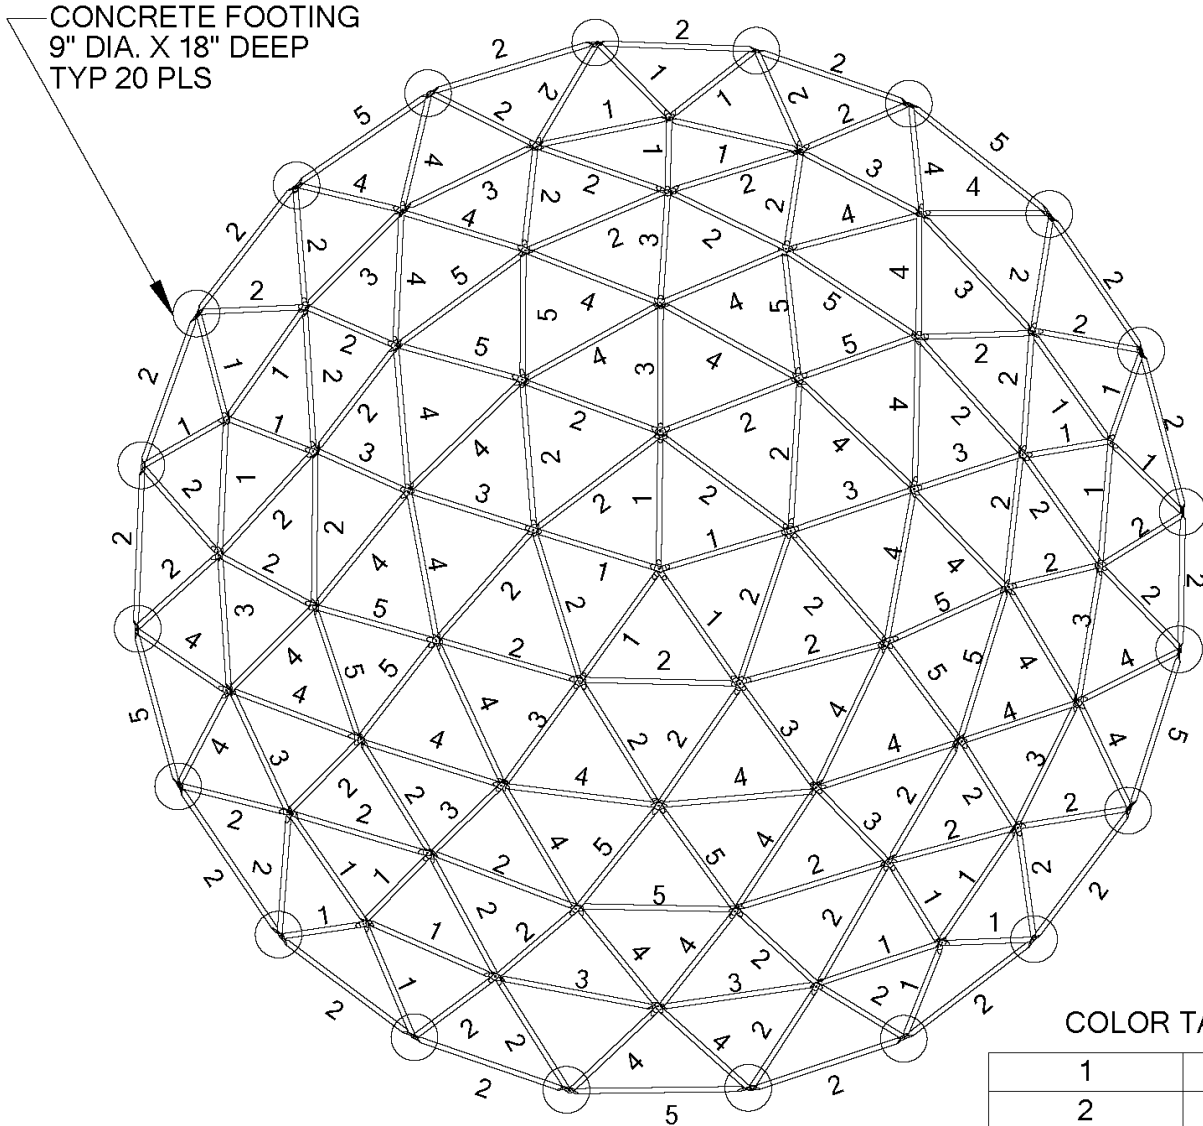

COLOR TABLE

1	GREEN
2	BLACK
3	ORANGE
4	BROWN
5	YELLOW